




Juliet Travers
for **DRAGONS**
OF WALTON STREET

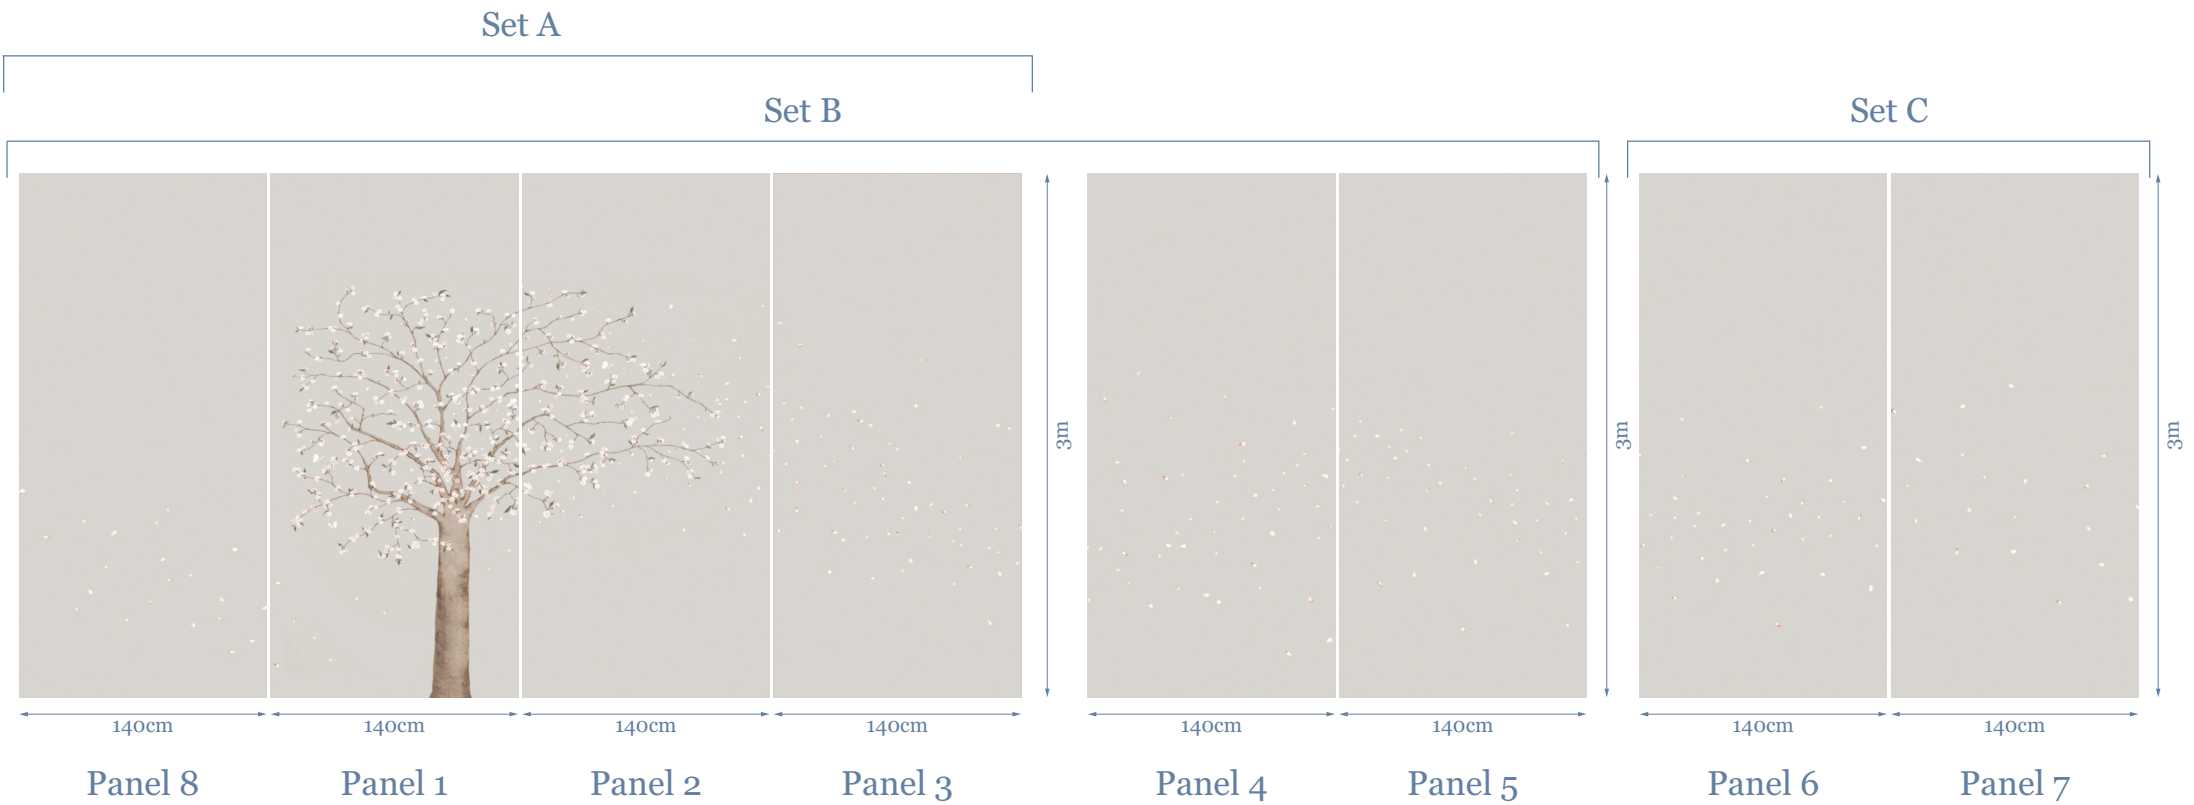

This wallpaper is designed over 8 panels but is sold in 3 sets.
(Set A Panels 8, 1, 2, 3) (Set B Panels 8, 1, 2, 3, 4, 5) (Set C Panels 6, 7).
Each panel measures 1400mm width by 3000mm in height. The total design height is 2354mm.



HANGING INSTRUCTIONS FOR WALLPAPER PANELS

IMPORTANT:

Before hanging this product please check that all rolls are undamaged, that numbers and letters are the same for each roll of this design and that all colours match. Return any defective roll with its label to the place of purchase. Take extra care when papering around electric light switches and power points. Do not allow moisture to drop onto electrical contacts. **This product is a 1400mm wide-width wallpaper, we recommend that it is hung carefully by a trained professional. This wallpaper is designed over 8 panels but is sold in 3 sets. Each panel measures 1400mm width by 3000mm in height. The total design height is 2354mm.** For walls shorter than 3m the wallpaper will need to be trimmed with a sharp decorating knife during the hanging process.

PREPARATION:

Prepare walls by removing all traces of dirt, old wallpaper or loose paint. Do not hang wallcoverings on any wall with a history of damp. Fill in any cracks and allow to dry before hanging. Absorbent surfaces should be appropriately sized using a diluted wallpaper adhesive. Sealed walls, i.e. painted should be rubbed with sandpaper to create a 'key'. It is important that the walls are of an even and consistent colour. If they are not, then consideration should be given to painting them with an appropriate colourwash. Alternatively, we recommend that walls should be 'lined' horizontally using a good quality lining paper. Allow this to dry fully.

APPLICATION:

We recommend the use of a ready mixed light weight tub adhesive. Evenly apply the adhesive directly onto the wall using a brush or short pile emulsion roller, then apply the first section of the wallcovering to the wall, smooth down with a good quality hanging brush. Apply the paste to the next section of the wall and apply the second panel with the edges overlapped making sure to match the design. The superwide panels have overdraw on the edges which is an additional 1cm of the design on each side. This acts as an overlap for hanging, this can be overlaid, spliced and then the excess removed. If your wall is shorter than 3m in height, trim either the top or bottom of each wallpaper panel accordingly with a sharp decorator's knife.

CAREFULLY WIPE ANY EXCESS PASTE FROM THE FACE OF THE PAPER IMMEDIATELY WITH A CLEAN DAMP SPONGE BEFORE IT DRIES. After hanging 3 lengths inspect to ensure there is no shading or other fault. **NO CLAIMS FOR HANGING COSTS WILL BE ALLOWED FOR GOODS HUNG IN EXCESS OF 3 LENGTHS.**